

NOTE:

1. You can assign even or uneven number of units in each phase to form a split-phase system.
2. Please remember DO NOT connect current sharing cable between the inverters which are in different phases, otherwise the inverters will be damaged.











