

**NOTE:**

1. You can assign even or uneven number of units in each phase to form a split-phase system.
2. Please remember **DO NOT** connect current sharing cable between the inverters which are in different phases, otherwise the inverters will be damaged.







