

5KVA-120V

【88】 ERROR CHECKING GUIDE






The possible cause of error 88:

The cable from the dip switch board to control board was loose. Or the dip switch board was failed.



You can follow as below to check the connection first:

Remove the screws
on the case.

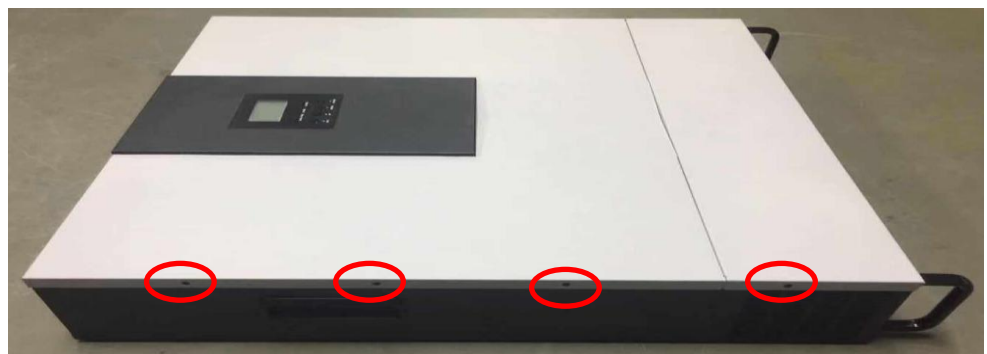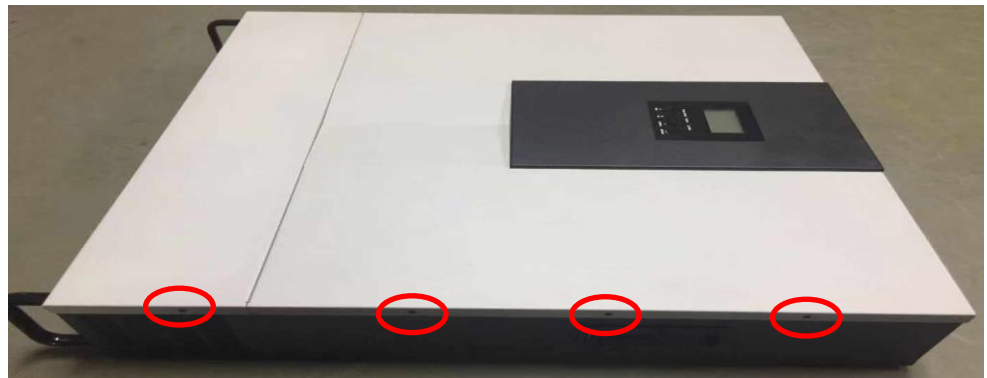


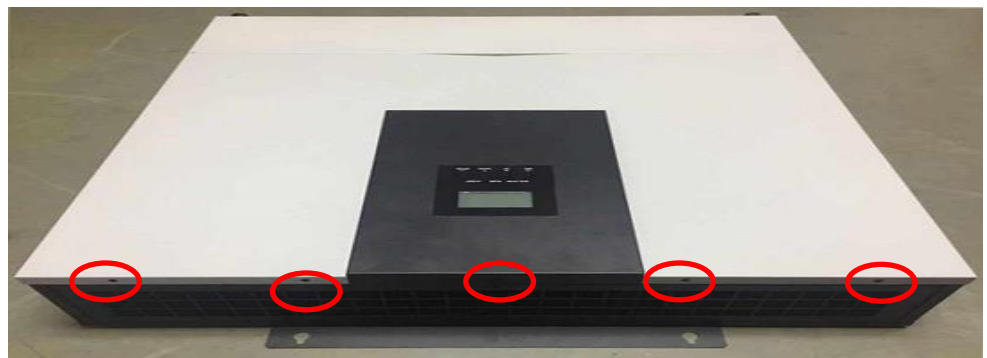

Please take off the top cover, and check the connection in the red mark.

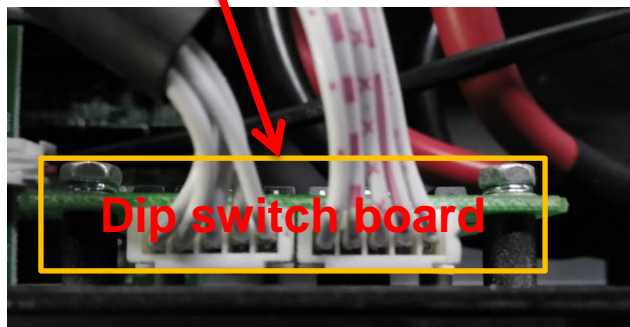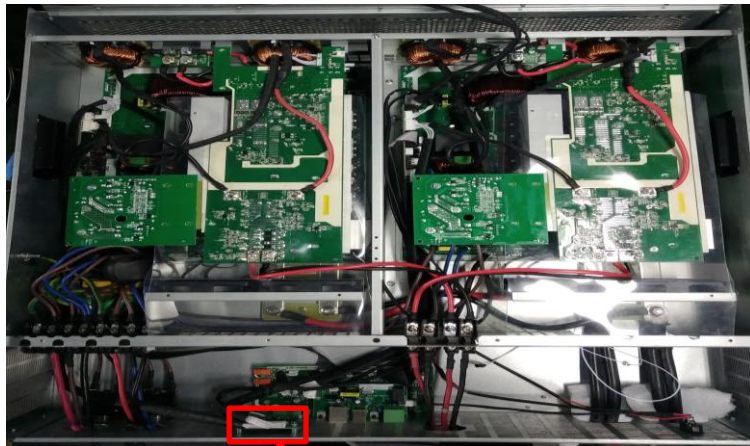

Please check the cables on the two control boards also.

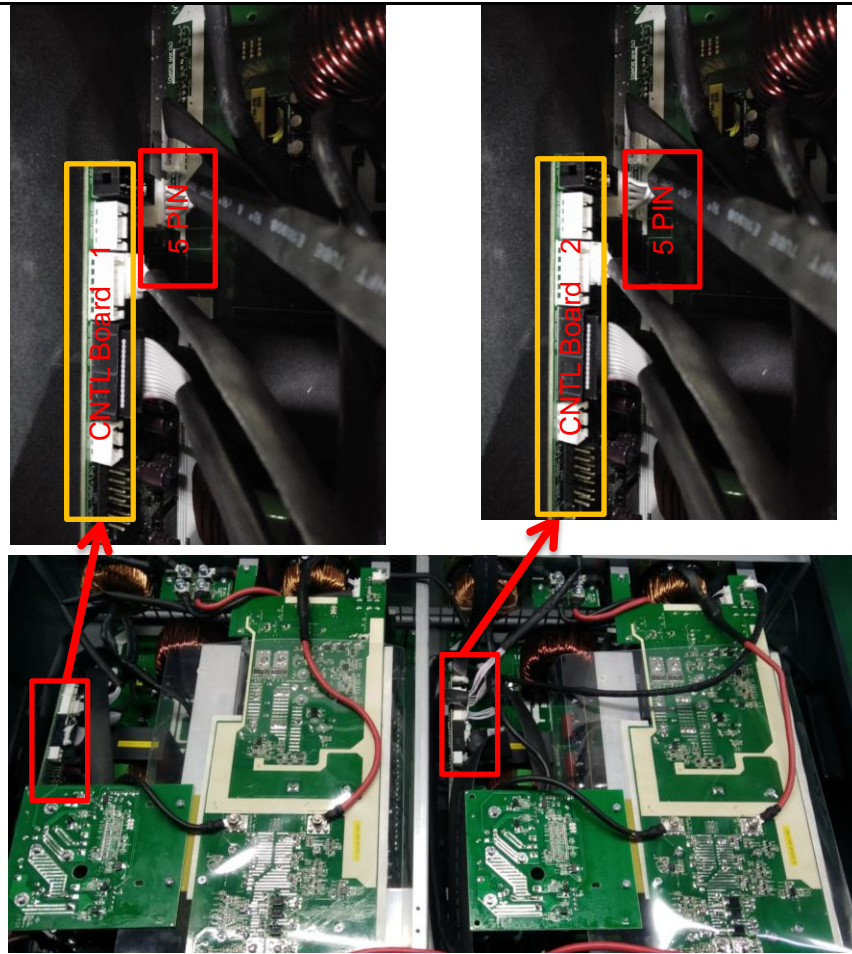

If the connection is OK, the possible issue is the dip switch board; you can change the board to solve it.