

【91 or 93】 ERROR SOP	5KVA-120V
-----------------------------	------------------




5KVA-120V

【91 or 93】

ERROR checking guide



Please open the case of the inverter, and following the guide below to check cables if they are well connected.

Remove the screws.

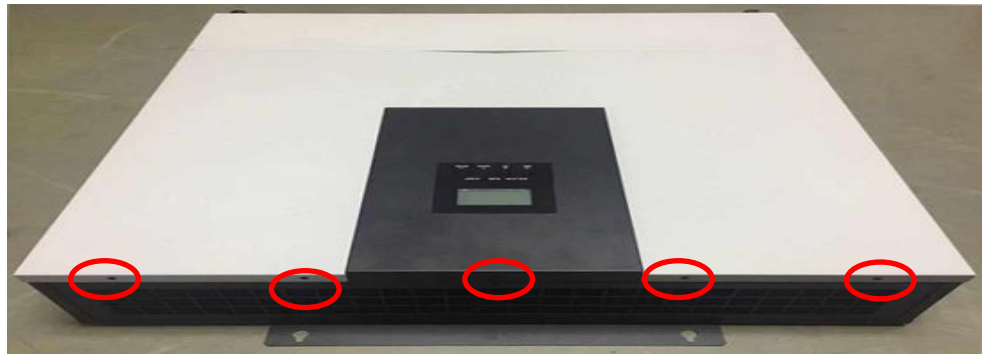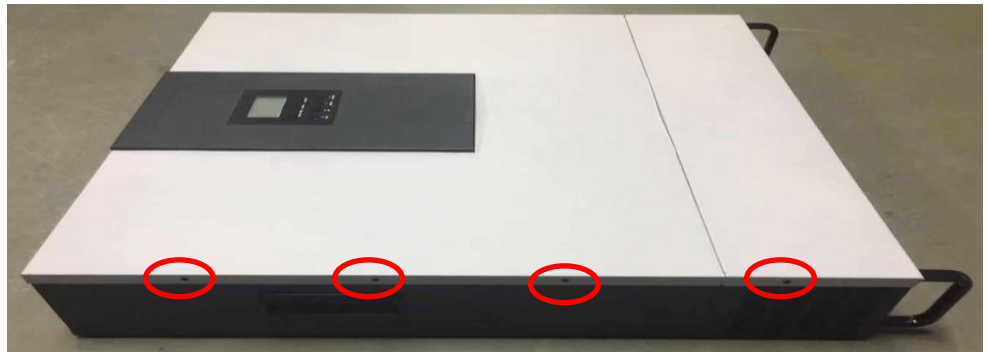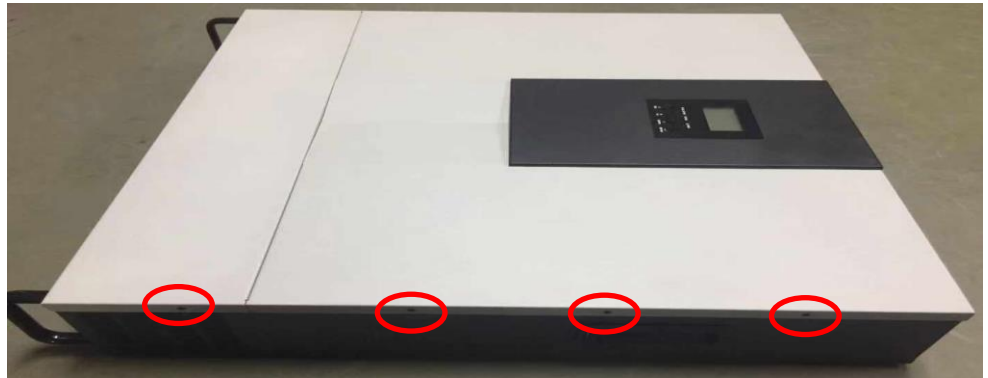



Open the top cover and check the first cable in the figure, is it well connected?

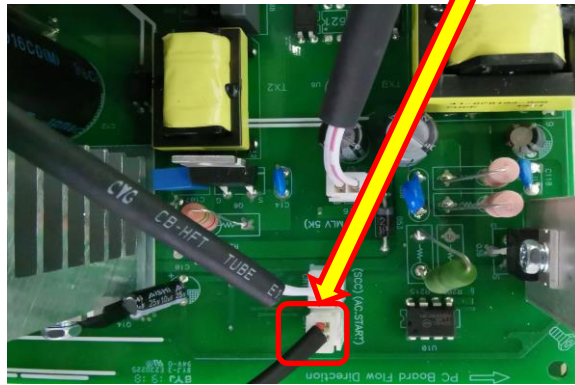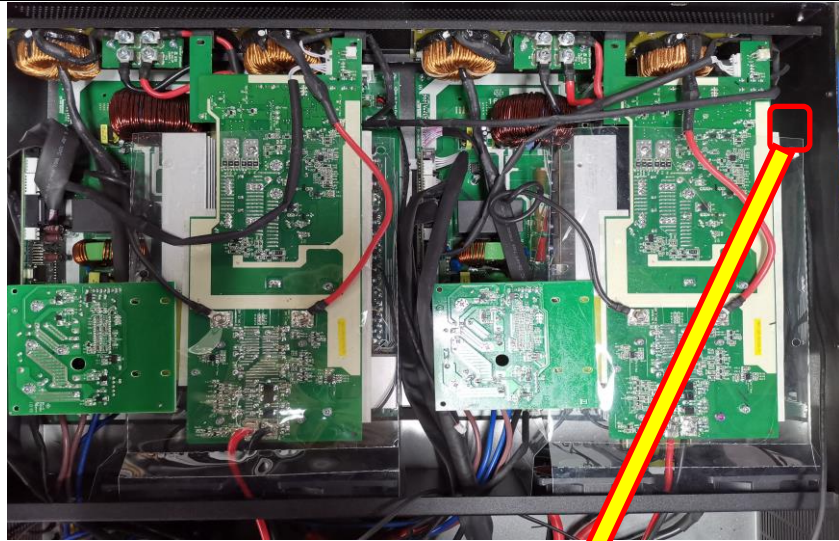

Checking the second cable if it is well connected.

